

## HB21 Heater Breakdown Detector (Usable for Phase-Control Circuit)

# Instruction Manual

Thank you for purchasing the Shimaden HB21 Heater Breakdown Detector. Please check that the delivered product is exactly what you ordered, referring to the list of model codes shown below and use it correctly as specified in the following instructions.

**Request** Please ensure that this instruction manual is provided to the final user of the apparatus.

### Introduction

This instruction manual is meant for those who will be involved in wiring, installation, operation and routine maintenance of the HB21. As this manual describes matters to be attended to in its operation, wiring and installation, you are requested to keep this manual at your work site when using the apparatus. You are also requested to follow the instructions provided herein.

For matters concerning safety, potential damage to equipment and facilities, additional explanation and instructions are given under the following heading:

- ⚠ WARNING** This heading indicates that failure to follow instructions could cause injury or even death.
- ⚠ CAUTION** This heading indicates that failure to follow instructions could cause damage to equipment and/or facilities.

#### ⚠ WARNING

1. This apparatus must be housed, for example, in a control box to prevent the terminal board from coming into accidental physical contact with personnel.
2. Wiring should be carried out without energizing the apparatus. Otherwise, an electric shock is probable.
3. Once wired, do not touch the terminals or other charged parts while they are energized.

#### ⚠ CAUTION

1. The alert mark on the plate affixed to the apparatus:  
On the nameplate affixed to the case of the apparatus, the alert mark is printed. This is to warn you of an electric shock which may result if the charger is touched while it is energized.
2. A means to turn power off, a switch or a breaker, should be installed in the external power circuit to be connected to the power terminals of this apparatus.
3. Note on Fuse  
This apparatus has no built-in fuse. Install a fuse in the power circuit to be connected to the power terminals. (0.5A, normal blow type)
4. In wiring, terminal connectors should be fastened properly.
5. Use power voltage and a frequency respectively within the ranges of their ratings.
6. Do not apply voltage and current which are out of the ranges of their ratings to the input terminals. Such an act may shorten the life of the product or cause trouble with the apparatus.
7. In case the system is equipped with output terminals, current and voltage of a load to be connected to the output terminals should be within the ranges of their ratings. If their ratings are exceeded, a rise in temperature may shorten the life of the product or cause trouble with the apparatus.
8. Be sure to cut the power supply OFF before pulling the apparatus out of its surface socket. Especially in case of using with an external CT, CT may be burnt out by pulling it out.
9. Users are prohibited from remodeling the apparatus or using it in an unauthorized manner.
10. You are requested to adhere to the matters to be attended to as described in the instruction manual in order to use the apparatus safely and correctly and to maintain its reliability.

## 1. Specifications


Model:	HB21
Power supply:	100~120/200~240 V AC $\pm$ 10% 50/60 Hz
Rated control voltage (Heater voltage):	100, 110, 120, 200, 220, 240 V AC (One of these to be selected)
Rated frequency:	50/60 Hz
Operation current:	0.5~5A AC (Use an external CT for a higher amperage than 5A.)
Continuous allowable current:	7A AC
Setting range:	10~100% (0.5~5A: When input voltage is rated value)
Sensitivity:	Approx. 3% of current setting value (When input voltage is rated value)
Operation time:	0.5 sec. Max. (In case of current changes from 150% to 0% of operating value)
Effect of fluctuation of input voltage:	$\pm$ 5% FS or less of theoretical value on operating current value with rated voltage (In a range from 20% to 110% of input voltage)
Alarm action output:	Relay contact (1c/SPDT)
Contact capacity:	240 V AC, 2A (Resistive load)
Alarm action display:	Red LED lamp is on during alarm action.
Operating ambient temperature/humidity:	-10~+50 °C/90% RH max. (No dew condensation allowed)
Temperature when kept unused:	-20~+65 °C
Insulation resistance:	500V DC 100M $\Omega$ Min. between power supply, current and output terminals
Dielectric strength:	1 min. at 1500V AC between power supply, current and output terminals
Material:	Molded from ABS resin
External dimensions	80(H) $\times$ 50(W) $\times$ 130(D)mm
Mounting:	11P plug-in panel or DIN rail
Weight:	Approx. 350g

**Note** This apparatus is designed for single-phase circuits, that is, unusable for 3-phase circuits.  
In case it is used for a heater of which the amperage exceeds 5A, a CT (current detector) should be installed externally.


**SHIMADEN CO., LTD.**

## 2. List of Model Codes

ITEM	CODE	SPECIFICATIONS	
1. SERIES	HB21-	Heater Breakdown Detector Usable for phase-controll circuit 0.5~5A	
2. CONTROL VOLTAGE (Heater voltage)	19-	100V AC	±10% 50/60Hz
	20-	110V AC	
	21-	120V AC	
	22-	200V AC	
	23-	220V AC	
	25-	240V AC	
	99-	Others	
3. REMARKS		0	Without
		9	With

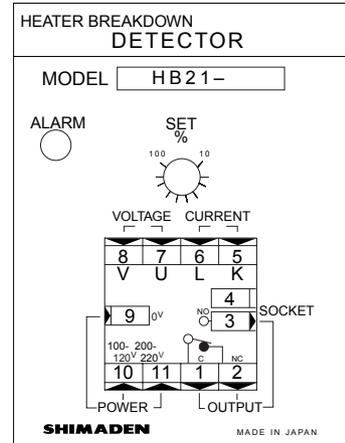

## 3. Example of Wiring

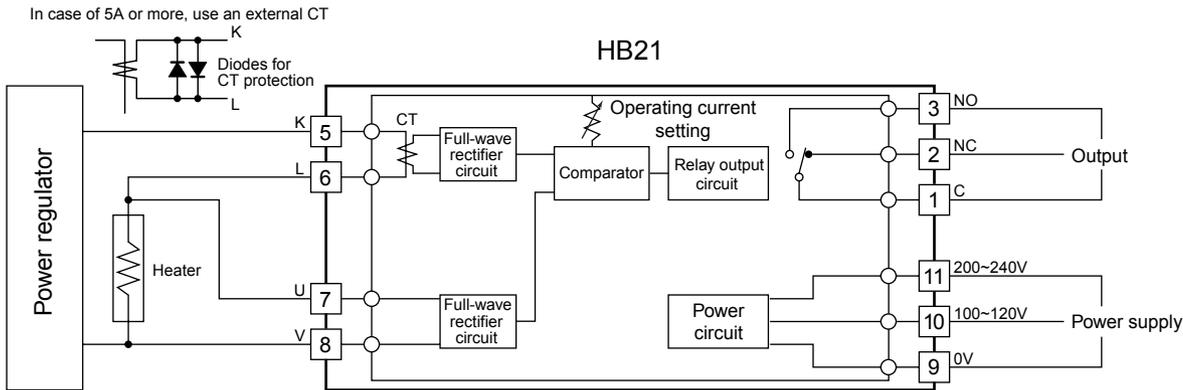

### CAUTION

In case of using this apparatus by 5A or higher of operating current, use it with an external CT which meets the load current. When you use the external CT, we recommend using diodes with it to prevent the CT from being burnt out when a power is applied under the situation that the apparatus is removed from the surface socket. Use diodes of each rated current capacity is 10A.

**Note** This apparatus is designed for single-phase circuits. It supports neither 3-phase circuit nor a heater control circuit to be phase-controlled by a thyristor.


## 4. Procedure of Setting

- (1) Set the VR of the HB SET at the maximum.
- (2) Maximize the voltage to the heater. Then the lamp lights and alarm is output.
- (3) Turn the VR of the HB SET to the left gradually and set it at the point where the lamp goes out.


In this condition, detection of a 10% rise of the value of heater resistance (10% decrease of the heater current) is possible.

In the case of a heater in which the value of resistance is variable, set the VR in the middle between the point set in (3) above and the minimum value. The closer to the minimum value is set in this step, the lower the dynamic sensitivity.

## 5. Diagram of Performance Characteristics

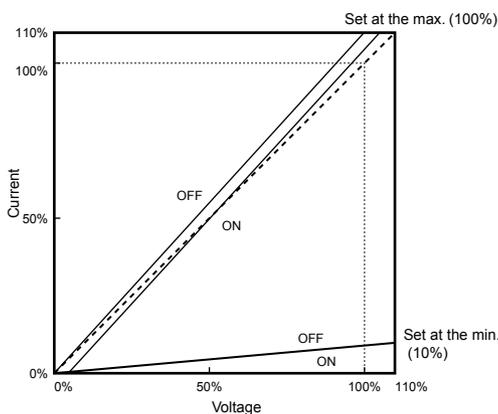

## 6. External Dimensions

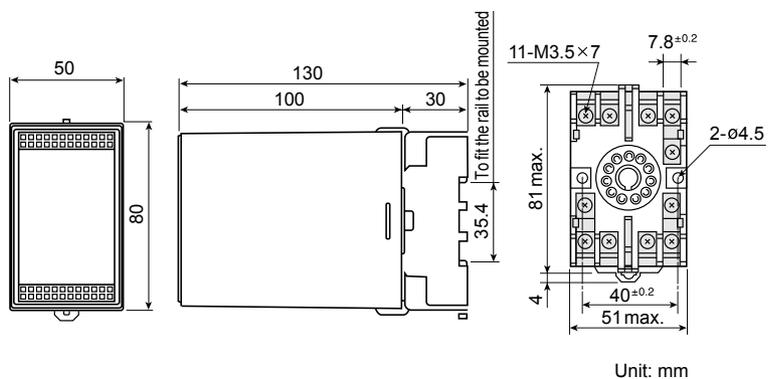

The contents of this manual are subject to change without notice.

Temperature and Humidity Control Specialists  
**SHIMADEN CO., LTD.**

Head Office: 2-30-10 Kitamachi, Nerima-Ku, Tokyo 179-0081 Japan

Phone: +81-3-3931-7891 Fax: +81-3-3931-3089

E-MAIL: exp-dept@shimaden.co.jp URL: <http://www.shimaden.co.jp/>

PRINTED IN JAPAN