

EM52 Series


Plug-in Type Servo Controller


Instruction Manual

Thank you for purchasing our product.
Check that the delivered product is the correct item you ordered.
Do not begin operating this product until you have read and thoroughly understood the contents of this Instruction Manual.

Notice: Make sure that this Instruction Manual is given to the final user of the device.

Preface: This Instruction Manual is meant for persons involved in wiring, installation, operation and routine maintenance of the EM52 Series. It describes matters to be attended to in handling the EM52 Series, how to install it and its wiring. It is requested that for ready reference, this manual is kept at the work site during operation of the EM52 Series. In operation, please follow the instructions contained herein.
This Instruction Manual describes matters to be attended to concerning safety, potential damage to equipment and/or facilities, additional explanations and notes under the following headings.

 **WARNING:** This heading indicates that failure to follow instructions could cause injury or even death.

 **CAUTION:** This heading indicates that failure to follow instructions could cause damage to equipment and/or facilities.



WARNING

The EM52 Series Servo Controller is designed for controlling temperature, humidity and other physical values. Therefore, it should not be used in any way that might result in injury or fatality, or must be used only after adequate safety measures are taken. No responsibility will be taken for any accident resulting from the usage of this device without appropriate safety measures being in place.

- This device must be housed, for example, in a control box to prevent the terminal board from coming into accidental physical contact with the human body.
- To prevent electric shock, always turn off and disconnect this device from the power supply before starting wiring.
- Do not touch wired terminals or charged parts with your hands while the power is supplied.

CAUTION

To avoid damage to connected peripheral devices, facilities or the product itself due to malfunction of this device, safety countermeasures such as proper installation of the fuse or installation of overheating protection must be taken before use. No responsibility will be taken for any accident resulting from the usage of this device without appropriate safety measures being in place.

- The Alert Symbol Mark  on the plate affixed to this device: The Alert Symbol Mark  indicated on the nameplate affixed on the casing of this device warns you not to touch charged parts while this device is powered ON. Doing so might cause an electric shock.
- A means for turning the power OFF such as a switch or a breaker must be installed on the external power circuit connected to the power supply terminal on this device. Fasten the switch or breaker at a position where it can be easily operated by the operator, and indicate that it is a means for powering this device OFF.
- Use this device by ensuring the wire connection part is firmly tightened.
- Fuse: This device has no built-in fuse. Ensure to install a fuse in the power circuit to be connected to the power supply terminal.
Fuse rating/characteristics: 250V AC, 0.5A/medium time-lagged type or time-lagged type
- Use the device with the power voltage, frequency, load current and voltage within their rated ranges.
- Use the device with the relay contact current only within its rated range. When using with any motor, use only within approx. 1/5 of the rated range since inrush current or surge voltage may occur.
- Users are prohibited from remodeling this device or using it in a prohibited or unauthorized manner.

1. Specification

Input.....	See ordering information.
Feedback Resistance.....	100Ω to 2kΩ random / 3-wire
Output	Relay contact or Triac (SSR)
Output Rating/Contact Protection	
Relay contact.....	240V AC, 1A (inductive load) / CR Absorber
Triac (SSR)	20 to 240V AC, 1A (inductive load) / CR Absorber + varistor
(Exclusively used for AC load)	
Hysteresis.....	Approx. 0.5% fixed of input signal range
Deadband (DB).....	1 to 10% variable of input signal range
Dead Time.....	Approx. 0.2 sec. (Chattering prevention)
Zero & Span Adjustment	0% (ZERO): 0 to 20% variable
	100% (SPAN): 70 to 100% variable
Output Action Display.....	M2-M1/LED green lighting
	M2-M3/LED red lighting
Operating Ambient Temperature	-10 to 50°C
Operating Ambient Humidity	90% RH max. (no dew condensation)
Storage Temperature.....	-20 to 65°C
Power Supply.....	100 to 240V AC ±10% 50/60 Hz
Power Consumption.....	Approx. 4 VA
Insulation Resistance.....	Between the input and power supply terminals: 500V DC, 100MΩ min.
	Between the output and power supply terminals: 500V DC, 100MΩ min.
Dielectric Strength.....	Between the output and power supply terminals: 1 min. at 1000V AC
Material.....	ABS resin molding
External Dimensions.....	83.5 (H) x 50 (W) x 146.5 (D) mm (including socket terminal block)
Installation	11P Plug-in
Weight.....	Approx. 170g

2. Ordering Information


ITEMS		CODE		SPECIFICATIONS	
1. SERIES		EM52-		Plug-in type servo controller	
2. INPUT		1	1 to 5mA DC, Receiving Impedance: 250Ω		
		2	4 to 20mA DC, Receiving Impedance: 62Ω		
		3	0 to 10V DC, Input Resistance : 200kΩ		
		5	Potentiometer 100Ωto 2kΩ, 3-wire type		
		9	Others (Please consult before ordering.)		
3. OUTPUT		Y	Contact 240V AC, 1A (inductive load) /with CR Absorber		
		R	Contact 240V AC, 1A (inductive load) /without CR Absorber		
		S	Triac 20 to 240V AC, 1A (inductive load) (Motor Supply Voltage: 20 to 240V AC)		
4. REMARKS		0	Without		
		9	With (Please consult before ordering.)		

3. Installations


Do not use this device in the following sites to avoid any trouble since use in such circumstances may generate severe harmful influence on its performance or its useful life, or lead to other shortcomings:

1. Locations that are filled with or generate corrosive gas or inflammable gas
2. Locations where high temperature/humidity is present
3. Locations where direct sunlight or radiant heat such as that from an electric furnace is present
4. Locations where any vibration or shock may be experienced

4. External Dimensions & Panel Cutout

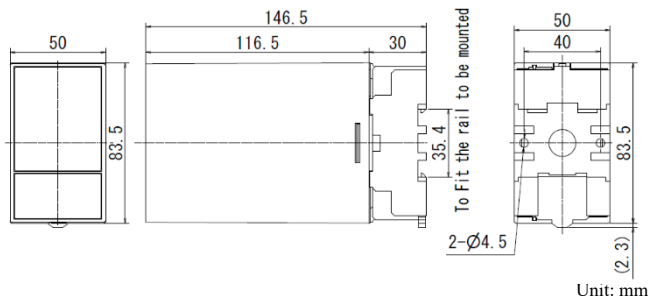


5. Terminal Arrangement

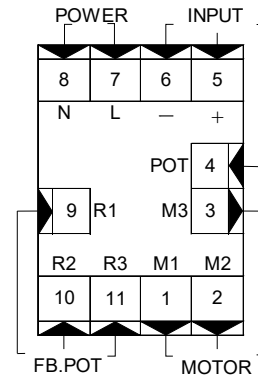

6. Wiring

1. Wiring should be routed according to the indications located on the terminal face plates.
Do not apply too much force when tightening the terminal screw.
2. Keep wiring away from strong electrolyte circuits, or use shielding wire to protect the feedback resistance wire from the input signal/control motor.
3. If you inadvertently connect the motor power supply to the feedback resistance circuit of the control motor, the potentiometer will burn.
4. Connection terminal symbols found on control motors may vary depending on their manufacturer. Refer to the instruction manual supplied by the manufacturer in question for clarification.

7. Connection Diagram

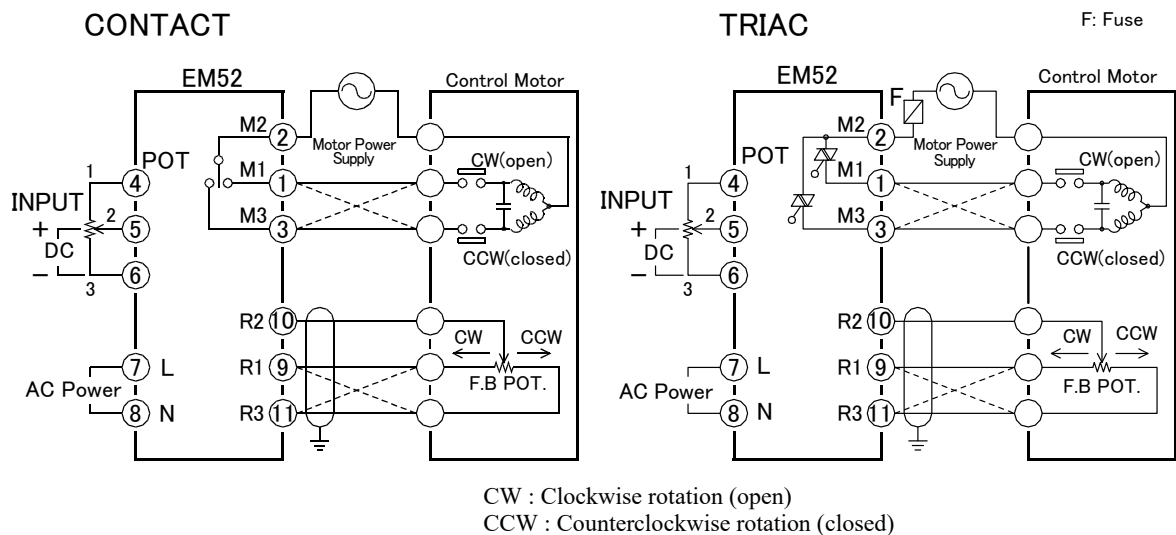


* For model with Triac (SSR),
motor power supply voltage range must be 20 to 240V AC.
It is recommended that the fuse between terminal 2 and the power supply terminal be used to protect motor upon malfunction.
(Current rating for fuse must be approximately twice the size which is appropriate for the motor for which it is being used.)

- Make sure the motor power supply matches the rating of the motor to be used.
- For inverting the operating direction of motor (to open with input at 0% and close with input at 100%), permute the wires for terminals ① and ③ as well as those for terminals ⑨ and ⑪ respectively.

8. Adjustment

8-1. Characteristic of Input Signal vs. Operating Output

If the control motor repeats quick hunting, turn the deadband from the narrow band gradually to the wide band until hunting stops.

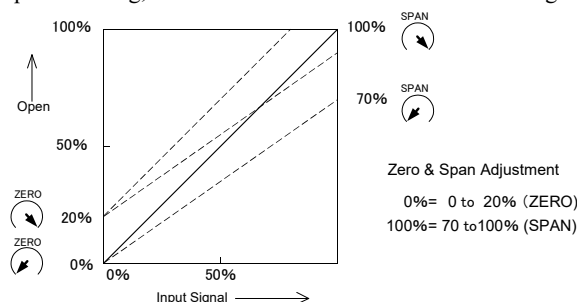

8-2. Adjustment of Operating Output

Confirm that the final control element is at 100% or the open position when 100% input signal is applied and at 0% or the closed position when 0% input signal is applied.

If there is any dislocation at the 0% position, adjust the Zero trimmer. In the case of dislocation at the 100% position, adjust the Span trimmer.

Note: Since the reaction of the final control element is normally slow, adjust the Zero and Span trimmers slowly.

8-3. Adjustment of Deadband (DB)

The deadband refers to the sensitivity between the clockwise (open) and counterclockwise (close) actions of the control motor. If the control motor repeats quick hunting, turn the deadband from the narrow band gradually to the wide band until hunting stops.

If the deadband is set unnecessarily wide, the control motor may be dull in response. (The deadband may be variable within 1 to 10% of the input signal range.)



9. Relay Application Diagram

Characteristic	Run	Increased	Balanced	Decreased
RA	Heat	M2 - M1: ON (Open)	M2 - M1, M3: OFF (Stop)	M2 - M3: ON (Close)
DA	Cool	LED lights green	LED off	LED lights red

The contents of this manual are subject to change without notice.

Temperature and Humidity Control Specialists
SHIMADEN CO., LTD.

Head Office: 2-30-10 Kitamachi, Nerima-ku, Tokyo 179-0081 Japan

Phone: +81-3-3931-7891 Fax: +81-3-3931-3089

E-MAIL: exp-dept@shimaden.co.jp URL: <https://www.shimaden.co.jp>

PRINTED IN JAPAN